# 3. Overview of the Washing Machine

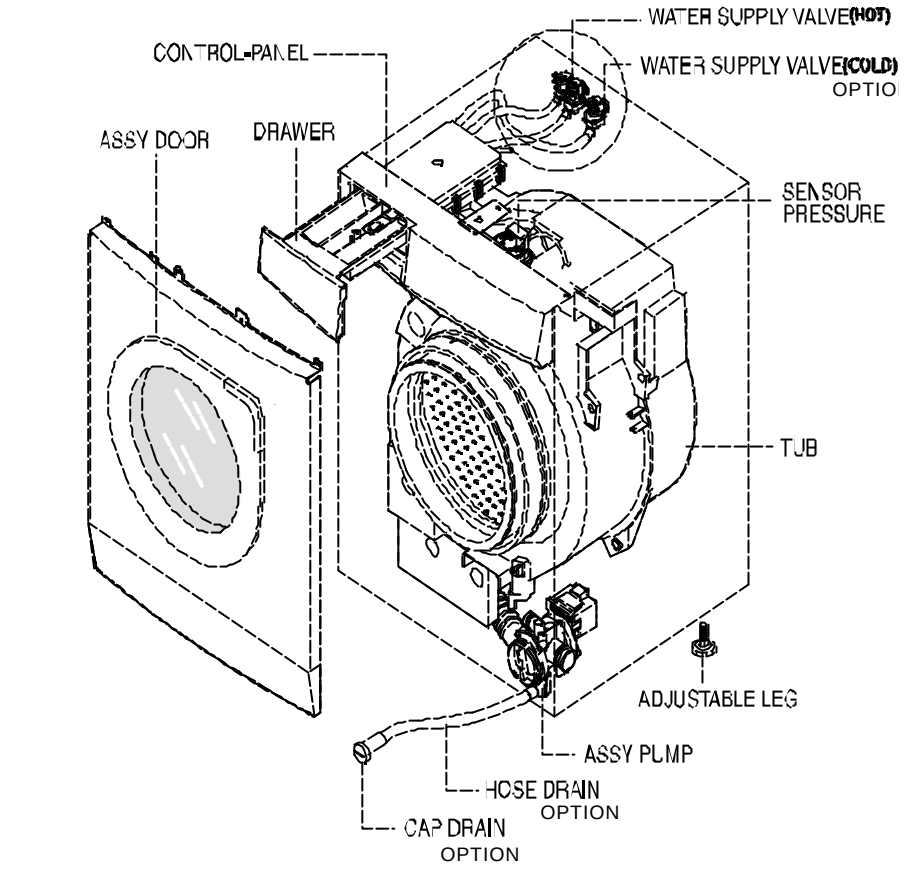


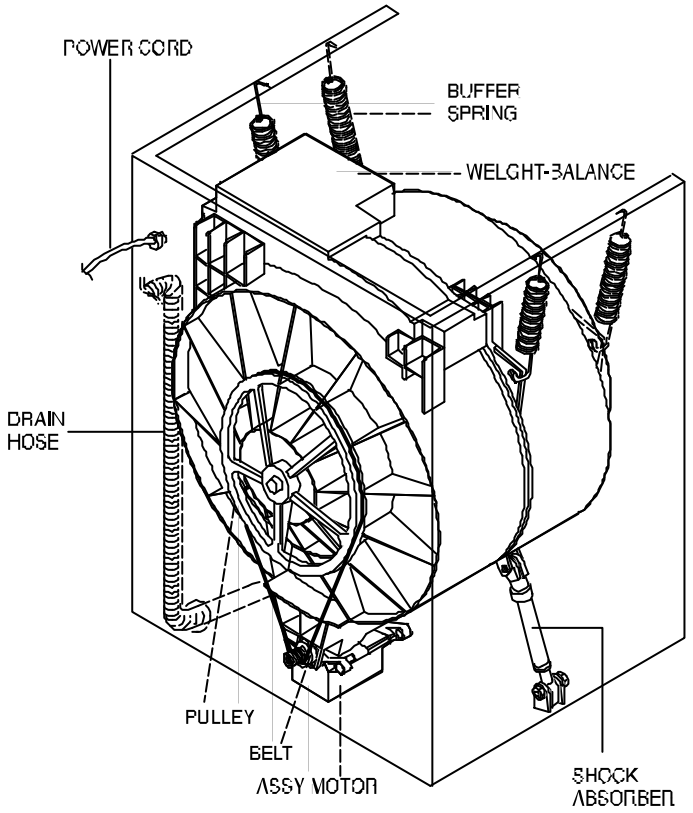

# 4. Overview of the control panel

F1215J/F1015J

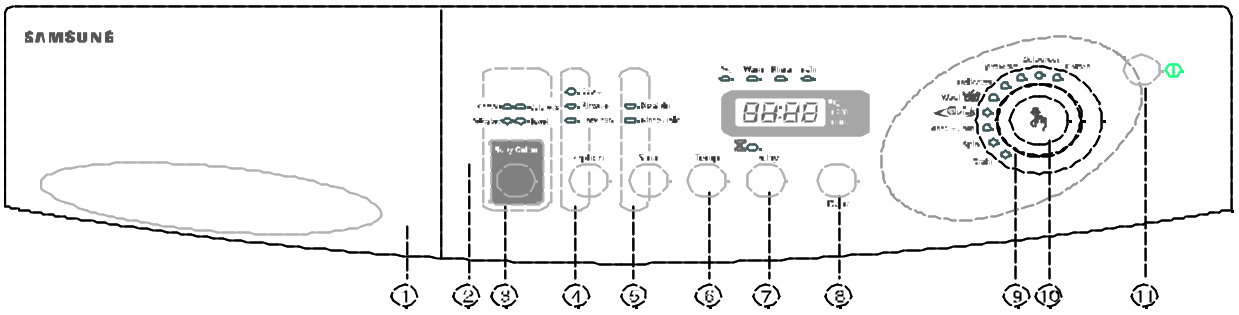


**1. Detergent dispenser**

**2. Display panel**

Displays the remaining wash cycle time and error messages.

**3. Baby cotton button**

Press the button to select one of the three available Baby Cotton programs.
Cotton(Underwear) ➔ Coloureds ➔ Delicates ➔ Towel

**4. Option button**

Press the button repeatedly to cycle through the available partial wash options
(Eco' ➔ Rinse+ ➔ Prewash➔ (Eco'+ Rinse+) ➔ (Rinse+ Prewash) ➔ Cancel ➔ Eco').
**Note** : Prewash/Eco' is available only with Baby Cotton(Cotton. Coloureds, Delicates, Towel),Cotton, Coloureds, Synthetics or Delicate programs.

**5. Spin selection button**

Press the button repeatedly to cycle through the available spin speed options.

| | | |
|---|---|---|
| F1215J/F1213J | no, rh, 400, 600, 800, 1000, 1200 rpm | *no:no spin, rh:rinse hold* |
| F1015J/F1013J | no, rh, 400, 600, 800, 1000 rpm | |
| F815J/F813J | no, rh, 400, 600, 800 rpm | |

When pressing this button during operation, you can see the selected spin speed in the display panel.

**6. Temperature selection button**

Press the button repeatedly to cycle through the available water temperature options (cold water, 30 C, 40 C , 60 C and 95 C). When pressing this button during washing, you can see the selected temperature in the display panel.

**7. Delay (Start) button**

Press the button repeatedly to cycle through the available delayed start options (from 1 hour to 24 hours in one hour increments).

**8. Door (Open) button** (F1215J/F1015J)

Press to open the washing machine door.
**Note:** You cannot open the door until you press ⏻ (On/Off).

**9. Fuzzy Control dial**

Turn the dial to select one of the nine available wash programs.

| |
|---|
| Cotton, Coloureds, Synthetics, Delicates, Wool, Quick, Rinse+Spin, Spin, Drain |

**10. Start/Pause button**

Press to pause and restart programs.

**11. ⏻ (On/Off) button**

Press once to turn the washing machine on, press again to turn the washing machine off. If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.

# 4. Overview of the control panel

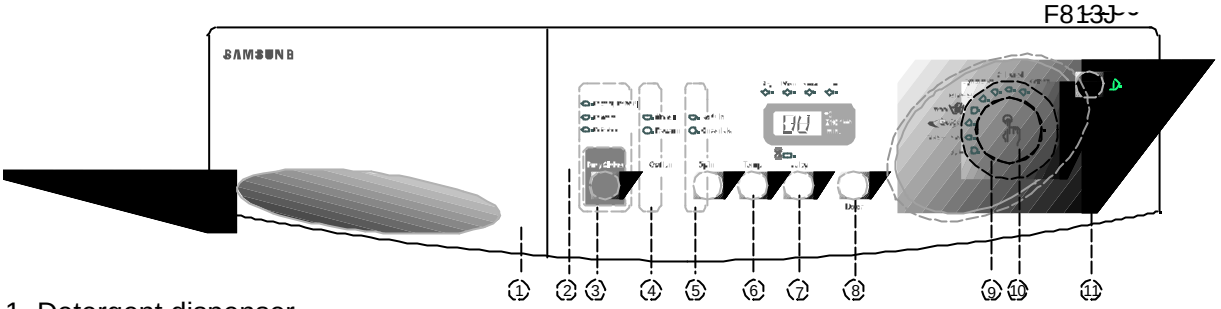


1. Detergent dispenser

2. Display panel
   Displays the remaining wash cycle time and error messages.

3. Baby Clothes button
   Press the button to select one of the three available Baby Clothes programs.
   Cotton(Underwear) ‘ Coloreds ‘ Delicates

4. Option button
   Press the button repeatedly to cycle through the available partial wash options
   { Rinse+ ‘ Prewash ‘ (Rinse++ Prewash) ‘ Cancel ‘ Rinse+}.
   Note : Prewash/Eco+ is available only with Baby Clothes,Cotton, Coloureds, Synthetics or Delicate programs.

5. Spin selection button
   Press the button repeatedly to cycle through the available spin speed options.
   When pressing this button during operation, you can see the selected spin speed in the display panel.

| | |
|---|---|
| F815J | no, rh, 4, 6, 8,(×100rpm) |

6.Temperature selection button
   Press the button repeatedly to cycle through the available water temperature options (cold water, 30 °C, 40 °C , 60 °C and 95 °C).
   When pressing this button during washing, you can see the selected temperature in the display panel.

7. Delay (Start) button
   Press the button repeatedly to cycle through the available delayed start options (from 1 hour to 24 hours in one hour increments).

8. Door (Open) button (F813J)
   Press to open the washing machine door.
   Note: You cannot open the door until you press (On/Off).

9. Fuzzy Control dial
   Cotton, Coloureds, Synthetics, Delicates, Wool, Quick, Rinse+Spin, Spin, Drain
   Turn the dial to select one of the nine available wash programs.

10. Start/Pause button
    Press to pause and restart programs.

11. (On/Off) button
    Press once to turn the washing machine on, press again to turn the washing machine off.
    If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.

# 5. Main function

**1) Auto power S/W off function**

- After power on, the auto power S/W off function automatically switches power off for you if you do not press selection button for 10 minutes
- After selecting the function, the auto power S/W off function automatically switches power off for you if you do not press start/pause button for 10 minutes
- until 5 minutes past, After finishing the last function, the auto power S/W off function automatically switches power off for you if you do not re-select the course button or manual button

**2) Door open function**

- Door just can be opened at water level 23.80 KHz over, water temperature 55℃ below, motro off, if power is off door is not opened (F1215J,F1015,F815)
- If door is open during the operating, all operating is halted, and door error message will be displayed (2-digit panel displays "Ed" 4-digit panel displays "door") and error melody will coming out
- Door open error can be cleared by closing the door. the operating keeps going on

**3) Rinse hold function**

- If rinse hold function selected, the operating is finished , the machine do not drain the water after last rinse

**4) No spin function**

- If no spin function selected, the operating is finished after last rinse

**5) Drain function**

- Drain function is over, after pumping out the water for 2 minutes , without motor rotating

**6) Pre-washing function**

- Pre-washing function can be selected ,when you choice the following mode; cotton, coloreds, sythetics, delicates, baby cotton
- Water level/reverse time is the same with the selected course
- Pre-washing takes about 15 minutes

**7) Rinse+ function**

- This function practises rinse process once more

# 5. Main function

**8) Power-out compensation function**

- If power is out on selected process, the process before power out is stored to EEPROM, once power is back the process before power out continues.
- When power is back, washing process starts from the process at the point of the power out, rinse/drain process starts from the initial process.

**POWER-OUT COMPENSATION FUNCTION PROCESS**

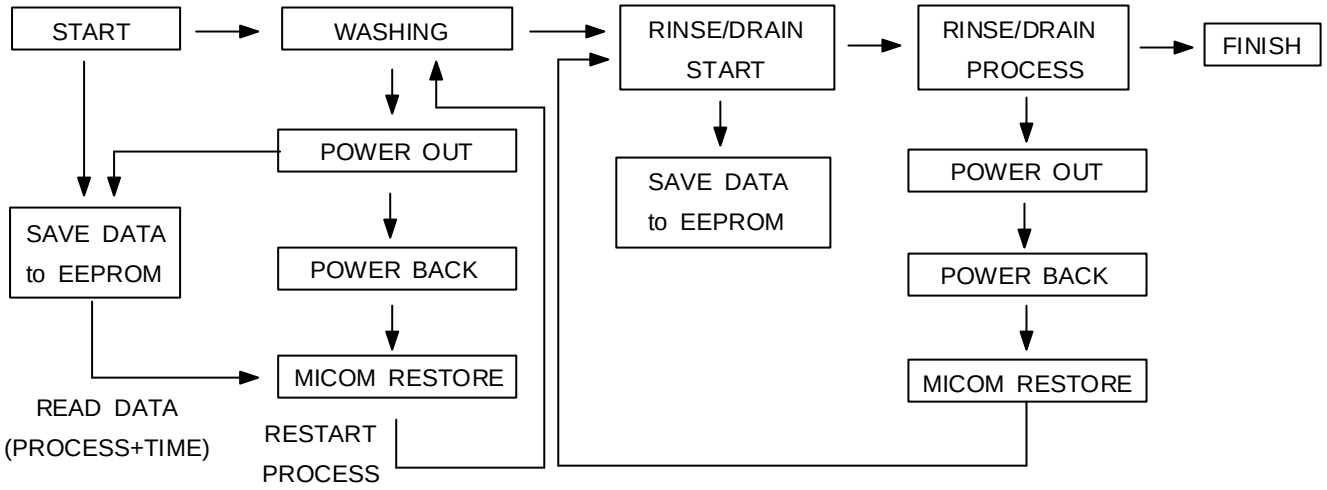


**9) Water heater Error function**

① This function starts working, when the heater works abnormally.
(this function begins sensing the heater 2 minutes later, after the heater operating)

② The value of the initial thermistor(A1) is compared with that of the thermistor(A2) in 2 minutes (Y=A2-A1)
- For 10 minute the variance of temperature(Y) is less than 2℃ "E5"message is displayed on the panel.

③ The value of the initial thermistor(A1) is compared with that of the thermistor(A2) in 11 minutes (Y=A2-A1)
- For 1 minute the variance of temperature(Y) increases more than 7℃(0.3V) "E6"message is displayed on the panel.

④ At this time heater, Error "E5 (heater do not work), E6(overheated)" is displayed and all working process off

⑤ The heater operating continues during heating hours, if washing hour is left over, the residual washing process keeps going without heating.

# 5. Main function

**10) Fuzzy washing function ( weight-sensing)**

☞ After finishing initial water supply, when the fall of the water level needs supplementary water supply, Sensing function perceives the weight with the supplementary water supply numbers and starts to work. Under the course of Cotton, or Coloureds, if the supplementary water supply numbers become 3 - 4 times the function is going at default condition ( high water level ), if 1-2 below that is going at middle level, if 0 below low water level, heating hours and rinse hours depend on the above data.

**ECO PRE mode is selected, the process going on at default condition.**

| | Washing hours | | Rinse water level |
|---|---|---|---|
| | Cotton | Coloureds | |
| High | Default | Default | Default |
| Middle | Default-12 min | Default-7min | 23.30KHZ |
| Low | Default-25 min | Default-15min | 23.70KHZ |

※After sensing weight, above hours is decreased from above default hours

**11) Bubble -detecting function**

At the each condition of washing&dehydrating , rinse&dehydrating , hydrating, bubble -detecting function works, this function works 5times normally, if the function detects bubbles at 6 times , the bubble-detecting function stops and go on to the next process.

● The bubble-detecting function during washing & dehydrating to rinse & dehydrating
after 2 times instant dehydrating and before main dehydrating, if the water level is under 25.45KHZ, Bubble

→ Detecting function thinks there are bubbles and add the bubbles-removing rinse, needing hours are above hours and 8 min 40 sec.

→ The bubble-detecting function during single hydrating process
after 2 times instant dehydrating and before main dehydrating , if the water level is 25.45KHZ below or during main dehydrating, water level data is 23.80KHZ below Bubble-detecting function thinks there are bubbles and add the bubbles-removing rinse 1 times, needing hours are above hours and 5 min 55 sec.

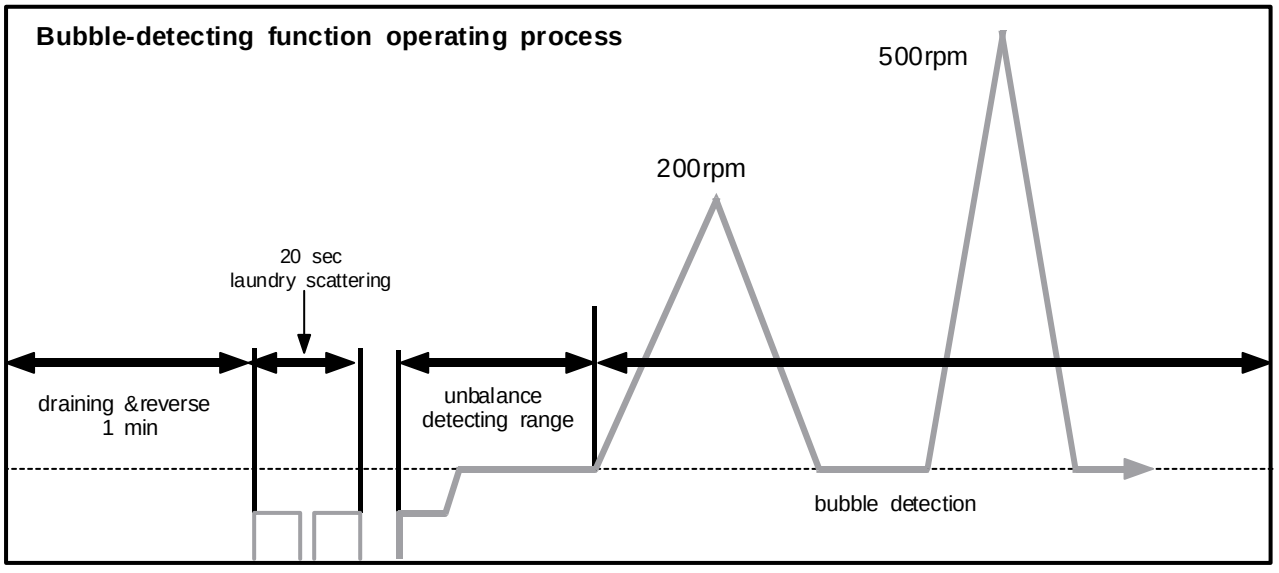

# 5. Main function

**12) Unbalance detecting & laundry balance positioning system**

① Just before the hydrating process and just after reversal rotation for balancing laundry position, this function is carried out

② The initial 6 sec is the period of reversal rotation for balancing laundry position , Drum rotates 50rpm for initial 6 sec

③ Next 10 sec, the rotation increases the speed from 50 rpm to 90 rpm slowly

④ During the next 18 sec, drum rotates at the speed of 90 rpm, the sensor decides the degree of laundry unbalance with TACHO data which is attached to motor

⑤ If the degree of unbalanced laundry is over 6 times to default value, laundry balancing system carries out feed back process 6 times

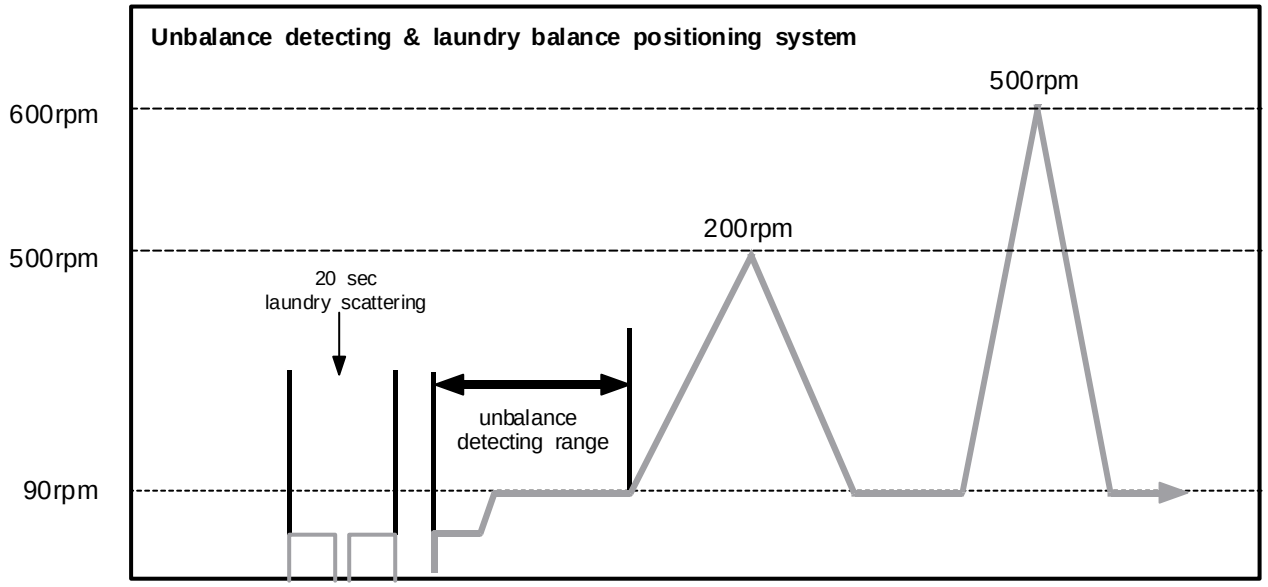


**13) R.P.M control**

The rotating motor enables the magnetics( i.e generator) to generate magnetic flux in proportion to r.p.m, magnetic flux induced by coil sensor in the opposite side produces the wave like the figure below to $d\Phi/dt$ and via rectangual wave generating citcuit, the waves reaches MICOM and micom controls r.p.m with the pulse, count and cycle inputted by program.

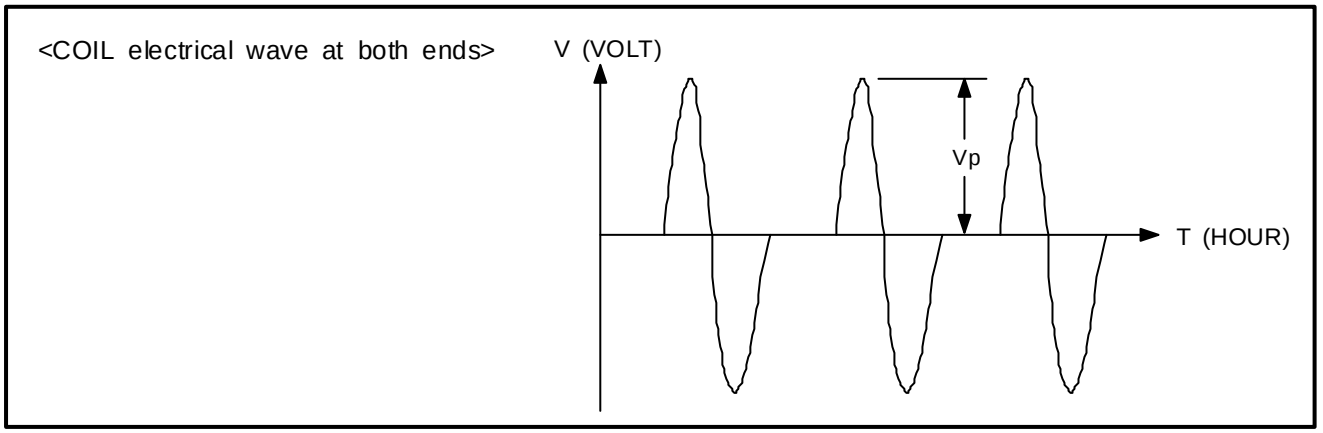

# 6. Technical point

## 1) Motor on/off time at each course

unit:sec

| Course | Washing | | | | Rinse | | | | Motor r.p.m |
|---|---|---|---|---|---|---|---|---|---|
| | Cw | Off | Ccw | Off | Cw | Off | Ccw | Off | |
| Cotton | 13 | 3 | 13 | 3 | 10 | 5 | 10 | 5 | 50 |
| Coloureds | 11 | 4 | 11 | 4 | 10 | 5 | 10 | 5 | 50 |
| Synthetics | 7 | 8 | 7 | 8 | 7 | 8 | 7 | 8 | 40 |
| Delicates | 5 | 10 | 5 | 10 | 5 | 10 | 5 | 10 | 30 |
| Wools | 2 | 58 | 2 | 58 | 2 | 28 | 2 | 28 | 25 |
| Quick | 12 | 3 | 12 | 3 | 10 | 5 | 10 | 5 | 45 |

※ Motor on/off time is measured in cold water, in heating time motor on/off time is 10 sec on and 5sec off in the cotton course, beside cotton course, in the other course motor on/off time is the same with that of cold water use.

## 2) Final dehydrating r.p.m at each course

unit:rpm

| Model / Course | F1215J F1213J | F1015J F1013J | F815J F813J |
|---|---|---|---|
| Cotton | 1200 | 1000 | 800 |
| Coloureds | 1200 | 1000 | 800 |
| Synthetics | 800 | 800 | 800 |
| Delicates | 600 | 600 | 600 |
| Wools | 400 | 400 | 400 |
| Quick | 1000 | 1000 | 800 |

※ You can change the r.p.m to the above a table by use spin button under no spin situation.

## 3) The water supply control at each process cycle

| Model / Process cycle | F813J |
|---|---|
| Washing | Cold water 5L/min / cold 10L/min |
| Rinse | Cold 10L/min |
| Final rinse | Cold water 5L/min + cold 10L/min |